


Maximo

ZEN YATAK ODASI 5 KAPAKLI GARDROP/ZEN BEDROOM WARDROBE

MONTAJ TALİMATLARI


ASSEMBLY INSTRUCTION

1 BU KAPAKLAR İÇİN SÜPER DEVE MENTEŞELER KULLANIN.
USE FLAT SUPER HINGES FOR THESE COVERS.

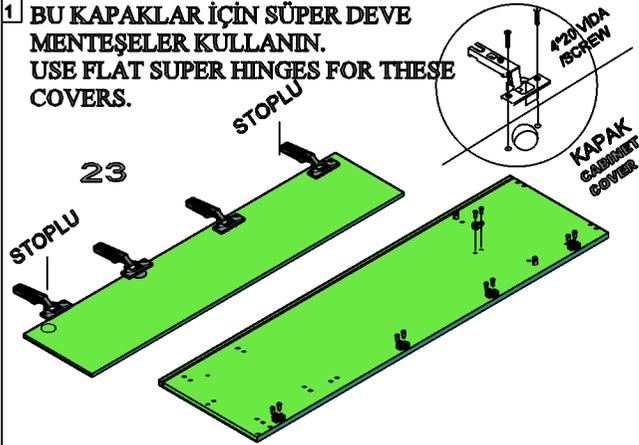


1-SAG SOL YAN VE ORTA DIKEY TABLALARA MINIFIX VIDALARINI, ASKI FLANSLARINI VE MENTESE TABANLARINI TORNAVIDA YARDIMI İLE SABİTLEYİNİZ.


1-MOUNT RIGHT, LEFT, SIDE AND CENTER PANELS MINIFIX SCREWS, HANGER FLANGES AND HINGES WITH SCREWDRIVERS.

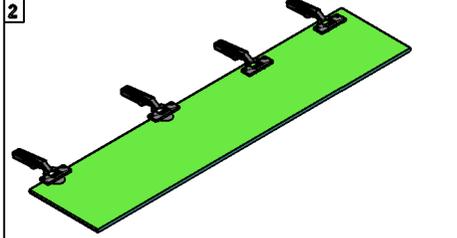

2-DİĞER TÜM KAPAKLARA YARIM DEVE MENTEŞELERİ MONTAJLAYINIZ.
2-INSTALL HALF ANGLE HINGES ON ALL OTHER DOORS.

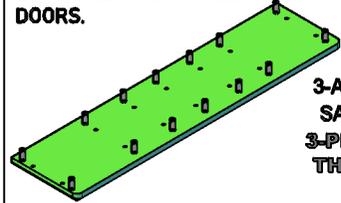


3-ALT TABLAYA MINIFIXLERİ SABİTLEYİNİZ.
3-PLACE MINIFIXES ON THE SUB PANEL.

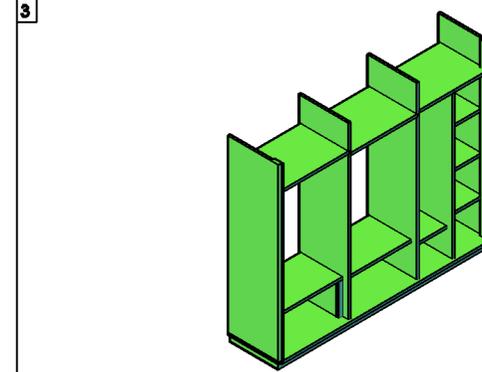


4-SOL YAN TABLAYI ALT TABLAYA SABİTLEYİNİZ.
5-ARKALIKLARI TAKINIZ.
6- ORTA DIK TABLALARI ALT TABLAYA SABİTLEYİNİZ.
7-SABİT RAFLARI SABİTLEYİNİZ.
8-SAG YAN TABLAYI SABİTLEYİNİZ.


4-MOUNT THE LEFT SIDE PANEL TO THE LOWER PANEL.
5-MOUNT THE REAR PANELS.
6- INSTALL CENTER VERTICAL PANELS TO THE LOWER PANEL.
7-MOUNT THE SHELVES.
8-MOUNT RIGHT SIDE PANEL.

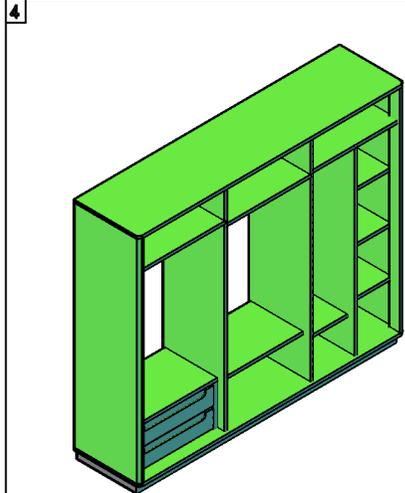


8-UST TABLAYI TAKINIZ.
8-MOUNT THE TOP PANELS.

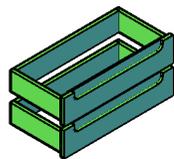

9-CEKMECE UNİTESİ MONTAJINI YAPINIZ.
9-DO THE INSTALLATION OF THE DRAWER BOX.

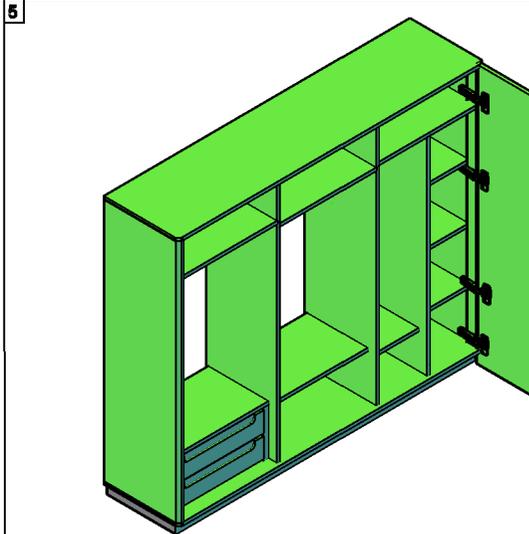

10-SEYYAR RAFLARI TAKINIZ.
11-KAPAKLARI VE KULPLARI TAKINIZ.
10-INSTALL THE SHELVES.
11-INSTALL COVERS AND HANDLES.

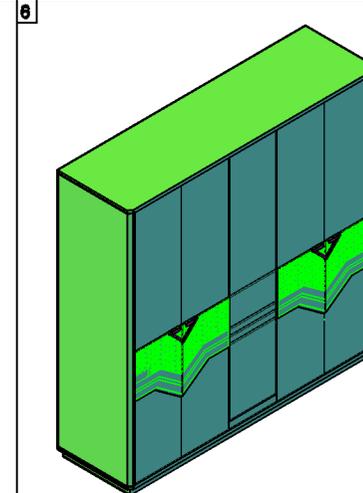

12- ARKALIKLARI 3,5*30 VIDA İLE SABİT RAFLARA SABİTLEYİNİZ
13-ARKALIK SABİTLEME TAKUZLARINI 3,5*16 VIDA İLE SABİTLEYİNİZ.
14-KAPAK AYARLARINI YAPINIZ.

12-REAR PANELS, WITH 3.5 * 30 SCREW MOUNT ON FIXED SHELVES.
13-MOUNT THE REAR PANEL FIXING APPARATUS WITH 3.5 * 16 SCREW.

14-DO THE COVER SETTINGS.