


Maximo

ZEN YATAK ODASI 6 KAPAKLI GARDROP/ZEN BEDROOM WARDROBE

MONTAJ TALİMATLARI


ASSEMBLY INSTRUCTION

- 1 BU KAPAKLAR İÇİN SÜPER DEVE
MENTEŞELER KULLANIN.
USE FLAT SUPER HINGES FOR THESE
COVERS.

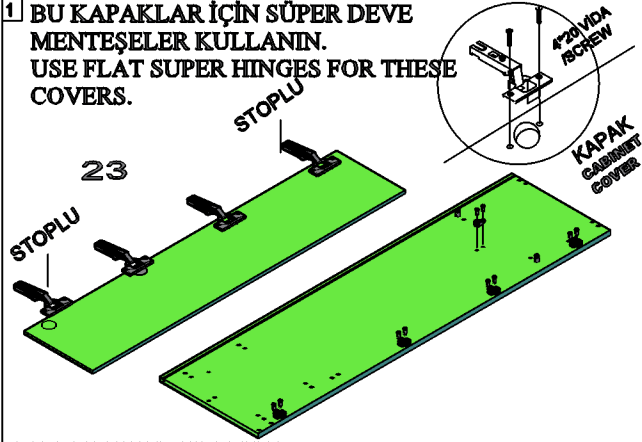


1-SAG SOL YAN VE ORTA DIKEY
TABLALARA MINIFIX VIDALARINI,
ASKI FLANSLARINI VE MENTESE
TABANLARINI
TORNAVIDA YARDIMI İLE SABİTLEYİNİZ.


1-MOUNT RIGHT, LEFT, SIDE
AND CENTER PANELS
MINIFIX SCREWS, HANGER
FLANGES AND HINGES WITH
SCREWDRIVERS.

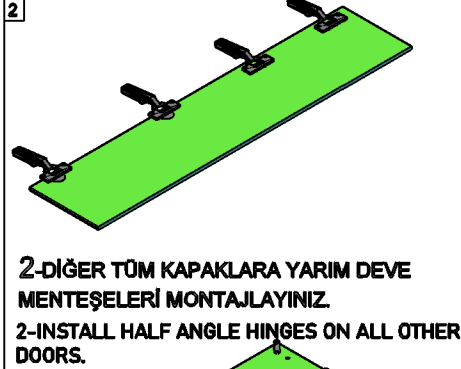

2-DİĞER TÜM KAPAKLARA YARIM DEVE
MENTEŞELERİ MONTAJLAYINIZ.
2-INSTALL HALF ANGLE HINGES ON ALL OTHER
DOORS.

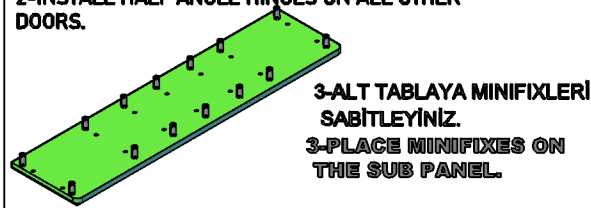


3-ALT TABLAYA MINIFIXLERİ
SABİTLEYİNİZ.
3-PLACE MINIFIXES ON
THE SUB PANEL.

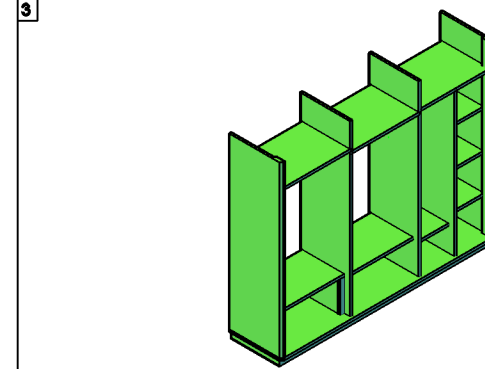


4-SOL YAN TABLAYI ALT
TABLAYA SABİTLEYİNİZ.
5-ARKALIKLARI TAKINIZ.
6- ORTA DIK TABLALARI
ALT TABLAYA SABİTLEYİNİZ.
7-SABİT RAFLARI SABİTLEYİNİZ.
8-SAG YAN TABLAYI SABİTLEYİNİZ.


4-MOUNT THE LEFT SIDE PANEL
TO THE LOWER PANEL.
5-MOUNT THE REAR PANELS.
6- INSTALL CENTER VERTICAL
PANELS TO THE LOWER PANEL.
7-MOUNT THE SHELVES.
8-MOUNT RIGHT SIDE PANEL.

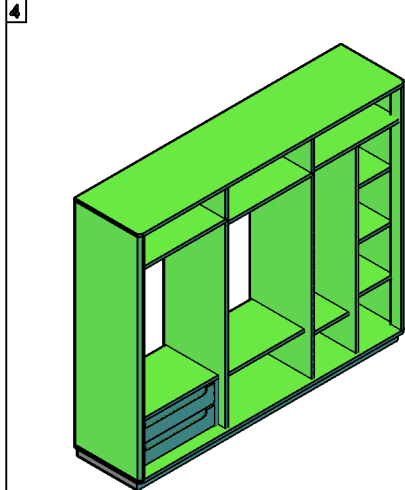


8-ÜST TABLAYI TAKINIZ.
8-MOUNT THE TOP
PANELS.

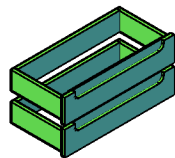

9-CEKMECE UNİTESİ
MONTAJINI YAPINIZ.
9-DO THE
INSTALLATION OF
THE DRAWER BOX.

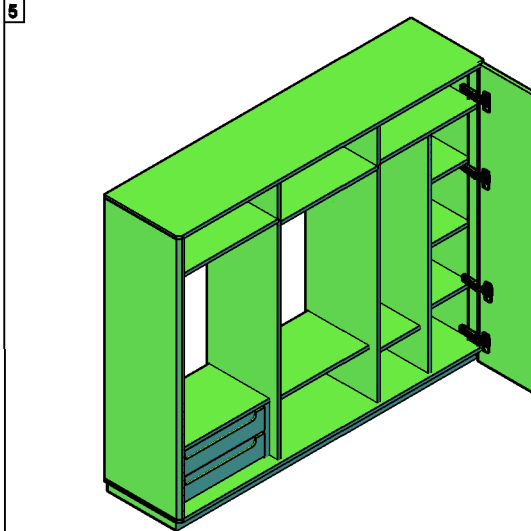

10-SEYYAR RAFLARI TAKINIZ.
11-KAPAKLARI VE KULPLARI TAKINIZ.
10-INSTALL THE SHELVES.
11-INSTALL COVERS AND HANDLES.

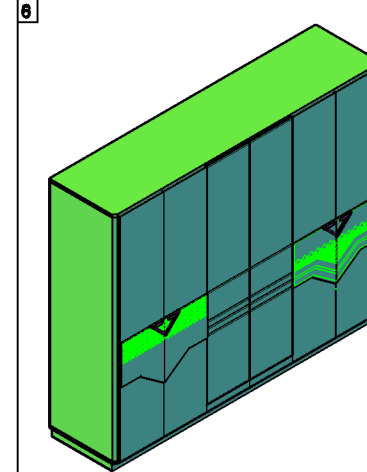

12- ARKALIKLARI 3,5*30 VIDA İLE
SABİT RAFLARA SABİTLEYİNİZ
13-ARKALIK SABİTLEME TAKUZLARINI
3,5*16 VIDA İLE SABİTLEYİNİZ.
14-KAPAK AYARLARINI YAPINIZ.

12-REAR PANELS, WITH
3.5 * 30 SCREW
MOUNT ON FIXED
SHELVES.
13-MOUNT THE REAR
PANEL FIXING
APPARATUS WITH 3.5 *
16 SCREW.

14-DO THE COVER
SETTINGS.